



INSTRUCTIONS

A35 Player

USER MANUAL

Safety Precautions

Before use of the equipment, please read all safety precautions to ensure safe and correct use of the product!

1.1 Do not open the cover

In order to prevent personal accidents, people rather than the Company's technical personnel may not open the upper cover of the equipment.

1.2 Please use the power supply and accessories approved by the manufacturer

The power supply of this product supports DC 5V-12V power input. Please use the power cord attached with the package of this product or use the power cord conforming to the standard.

1.3 Avoid all functional interfaces from contacting live objects

This product is an electronic product. If the functional interface contacts a live object, it may cause damage to the circuit components, thus affecting normal use of the product.

1.4 Keep away from inflammable, explosive and other dangerous goods

Keep away from inflammables and explosives. Do not use this product in inflammable and explosive environment!

1.5 This product does not support waterproof design. Do not directly have it contact liquid or use it in humid environment

Safety Protection Measures

In all installation programs of A35 networking player, please follow the safety

rules to avoid personal injury and equipment damage.

Unpacking and Inspection

After unpacking, check the items according to the packing list in the box. Please contact the salesman in time if you find the accessories are incomplete.

Overview

A35 is a new-generation cloud networking player, which supports the ColorlightCloud, 4G, WiFi, wired network and other various networking methods, and can be deployed rapidly to achieve intelligent cloud management function, and multi-screen, multi-business ad cross-regional unified management. It has significant advantages in the fields of indoor and outdoor fixed installation, centralized management, publish and monitoring, and can be widely used in various commercial display fields such as lamp post screen, storefront display screen, advertisement player, mirror screen, vehicle screen, etc.



Features

- Strong processing performance, supporting H.265 4K high-definition video hard decoding and playing
- It supports 8GB memory, and users can use 4GB
- Multiple play modes, supporting U-disk plug and play
- Window and materials
 - Support playing of multiple program pages, 32 program pages at most
 - Support rich media materials, such as pictures, videos, texts, clocks, etc., and support video and picture zooming
 - Support multi-window playing and overlay, and the window size and position can be set freely
 - Play up to 4 high-definition windows or one 4K video play window at the same time

- Comprehensive control scheme
 - Support control of multiple control platforms, LED Assistant, mobile phone, and tablet PC APP control
 - Support management of various different application software, convenient for different applications
- Network communication
 - WiFi dual band dual mode, WiFi hotspot mode or WiFi client mode, supporting WiFi 2.4G And 5G band¹
 - LAN, supporting DHCP mode and static mode
 - 4G communication, supporting 4G network in various countries (optional)

¹ The communication stability of WiFi hotspot and WiFi client signals is related to transmission distance, wireless network environment and WiFi band.

Appearance Description

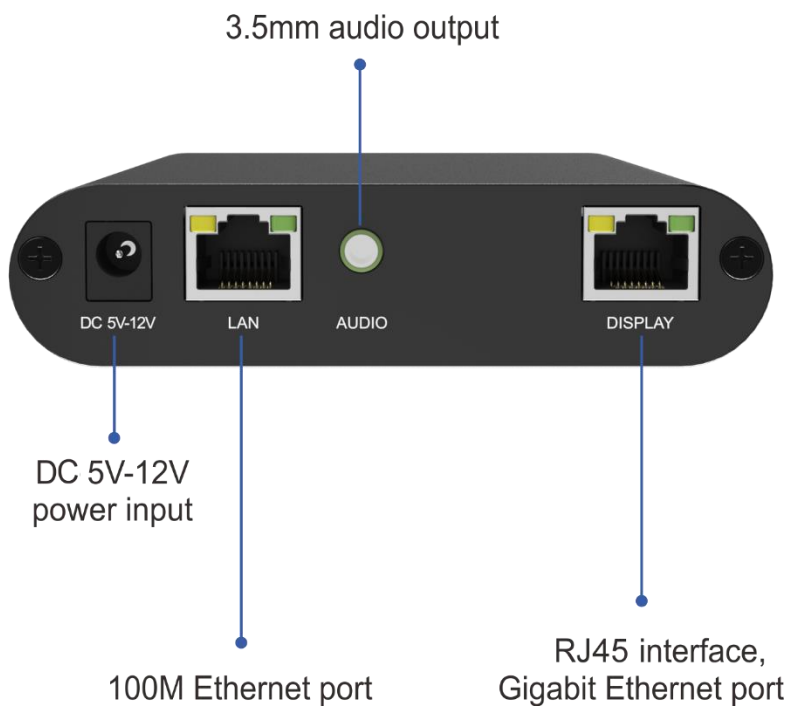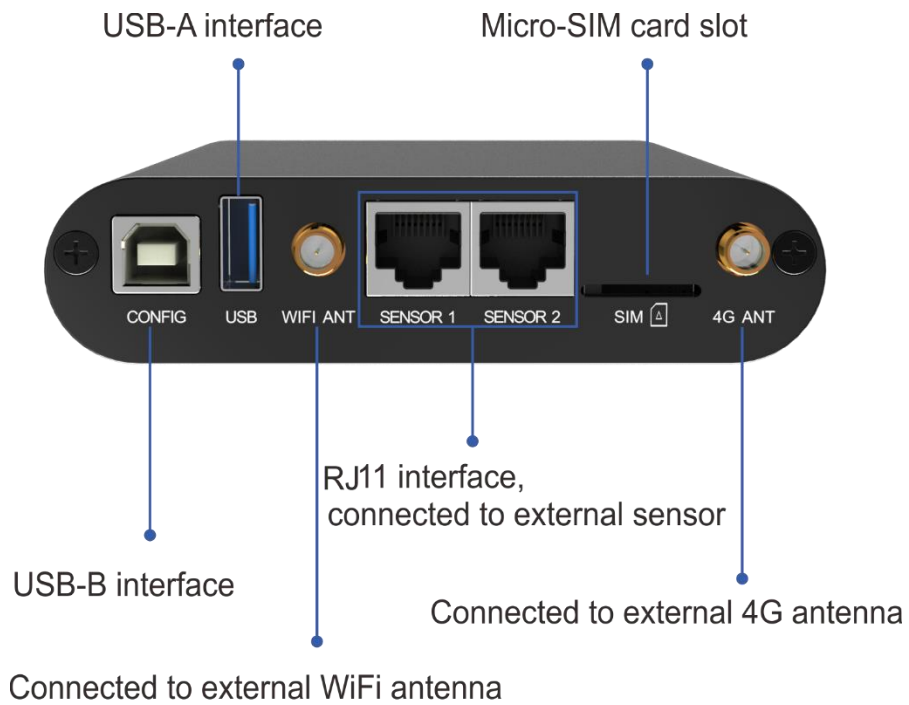

Quick Start

Users only need three steps to master the basic usage of A35 player.

Step I: Configure display parameters

- Connect the player to LED display screen correctly
- Configure LED display screen parameters and ensure that the display screen can display the complete picture

Step II: Configure player parameters

- Set player parameters (generally LED display screen resolution)
- Configure network parameters (set according to the customer' s actual needs)

Step III: Edit and publish the program

- Create a program and publish it to the player

Note:

1. For detailed configuration, please refer to the content of next chapter.
2. The supporting software to be used can be downloaded on our official website: www.colorlightinside.com [Support] → [Download].

Detailed Setting Steps

Step I: Configure display screen parameters

1. Connect the player to LED display screen correctly



2. Configure LED display screen parameters and ensure that the display screen can display the complete picture

Open LEDVISION software, click [Control], and enter the password “168” to enter the display screen settings interface:

- Select the [play box] mode to detect the player.
- Select [Receiver Cards Parameters] interface, load the display screen parameters, and after clicking Send, select Save to Receivers.
- Select [Receiver Cards Mapping (Look From Front)] interface, load the connection relation, and after clicking Send, select Save to Receivers


If the display parameters and connection relation parameters are not correct, please consult the display screen technical engineer.


Step II: Configure player parameters


Player parameters mainly include three aspects:

1. Screen parameter: The width and height of program playing window, generally set as the size of LED display screen
2. Network parameters: Select according to the actual needs of customers.
 - Standalone play: No configuration is required
 - LAN mode: Configure LAN, WiFi and WiFi hotspots according to actual needs, and choose one of them
 - Cloud mode: Configure LAN, WiFi and 4G according to actual needs, and choose one of them
3. Other configurations: Others are not required to be configured for the time being. Configure if necessary.

1. Set player parameters


Open PlayerMaster software, click  in the top right corner, and select [LAN Mode].

Select current player in the left list, and in the main interface of [Device], click Advanced Settings  in the bottom right corner to enter the parameter configuration interface.

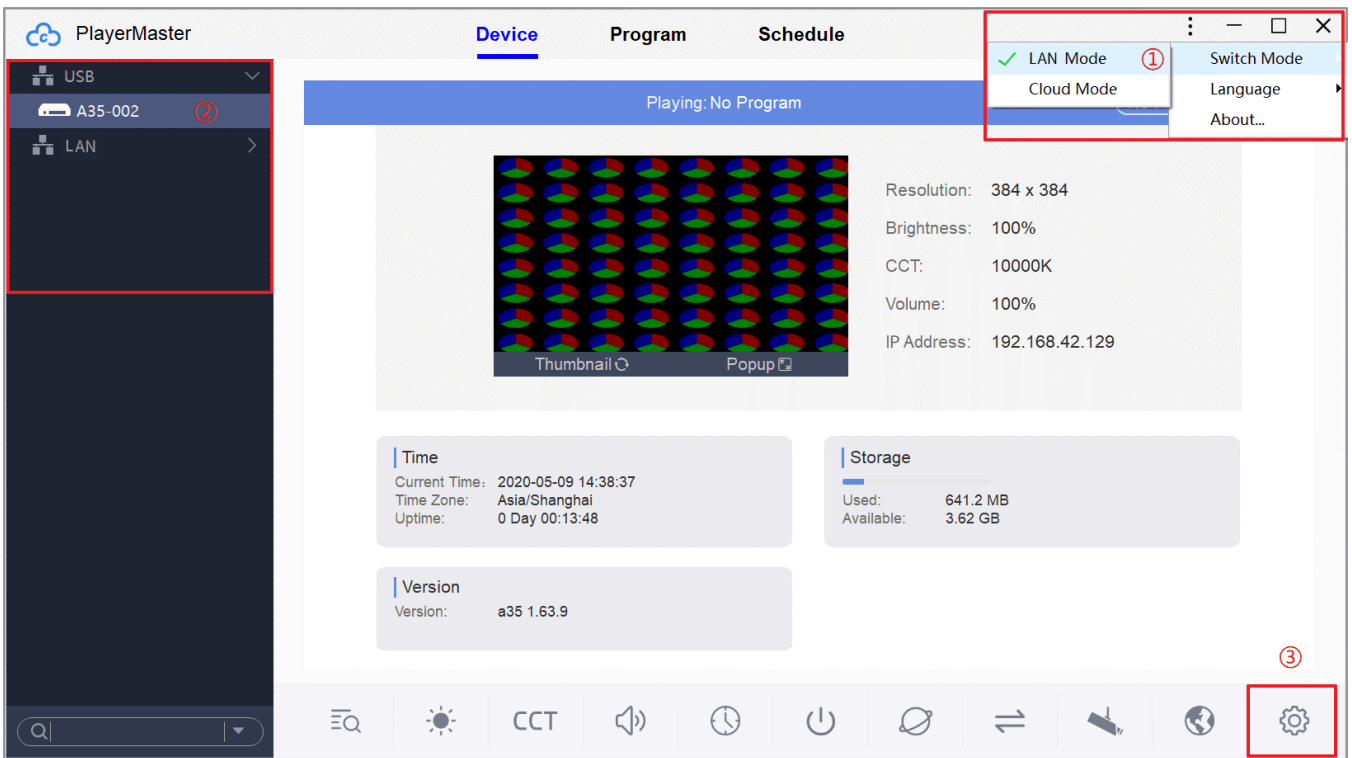


Screen parameter: Set the actual resolution of the screen.

After setting successfully, program production, program publish, and equipment management can be implemented through this communication mode.

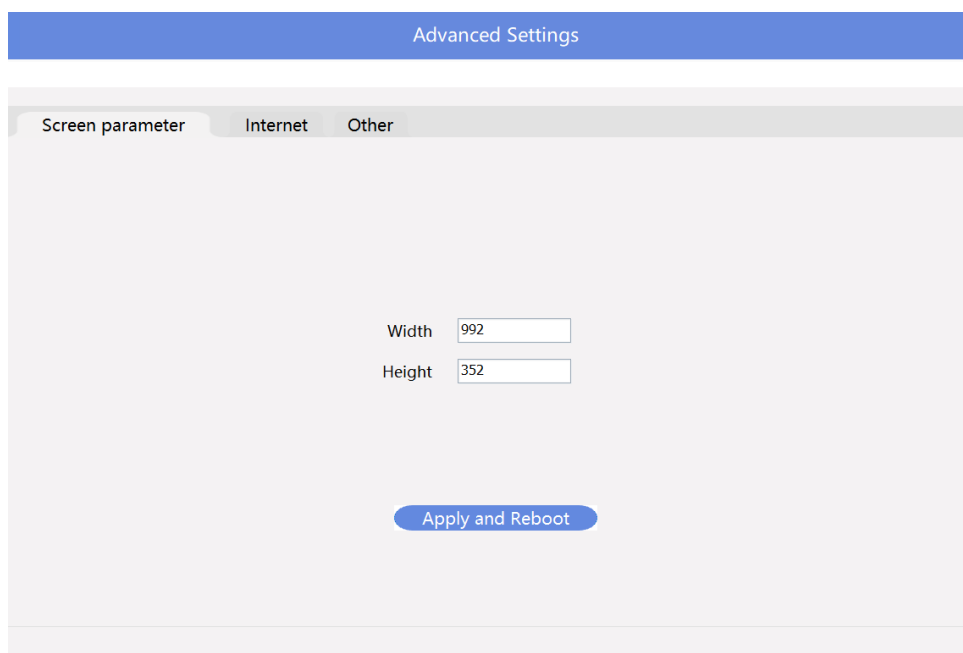

2. Configure network parameters

In the main interface of [Device], click Network Settings  to enter the following interface:

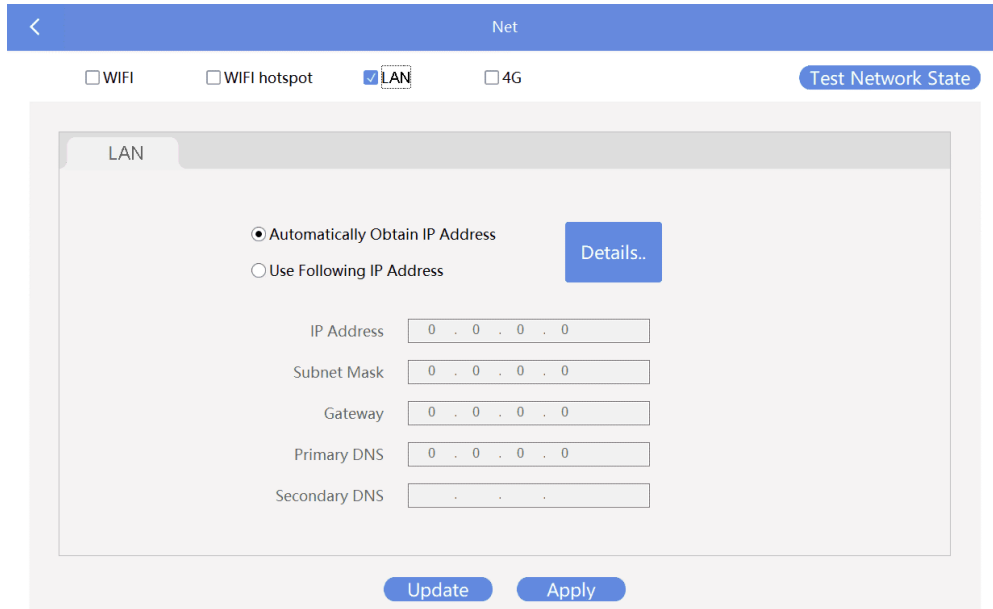


Take LAN port as an example. After it is connected to the network cable, the player will automatically obtain the IP address.

After setting successfully, program production, program publish, and equipment management can be implemented through this communication mode.

Step III: Edit and publish the program

1. Create a program and publish it to the player


In the main interface of [Program], select Add, set the resolution of the program (generally consistent with the resolution of the screen), and enter the program editor.

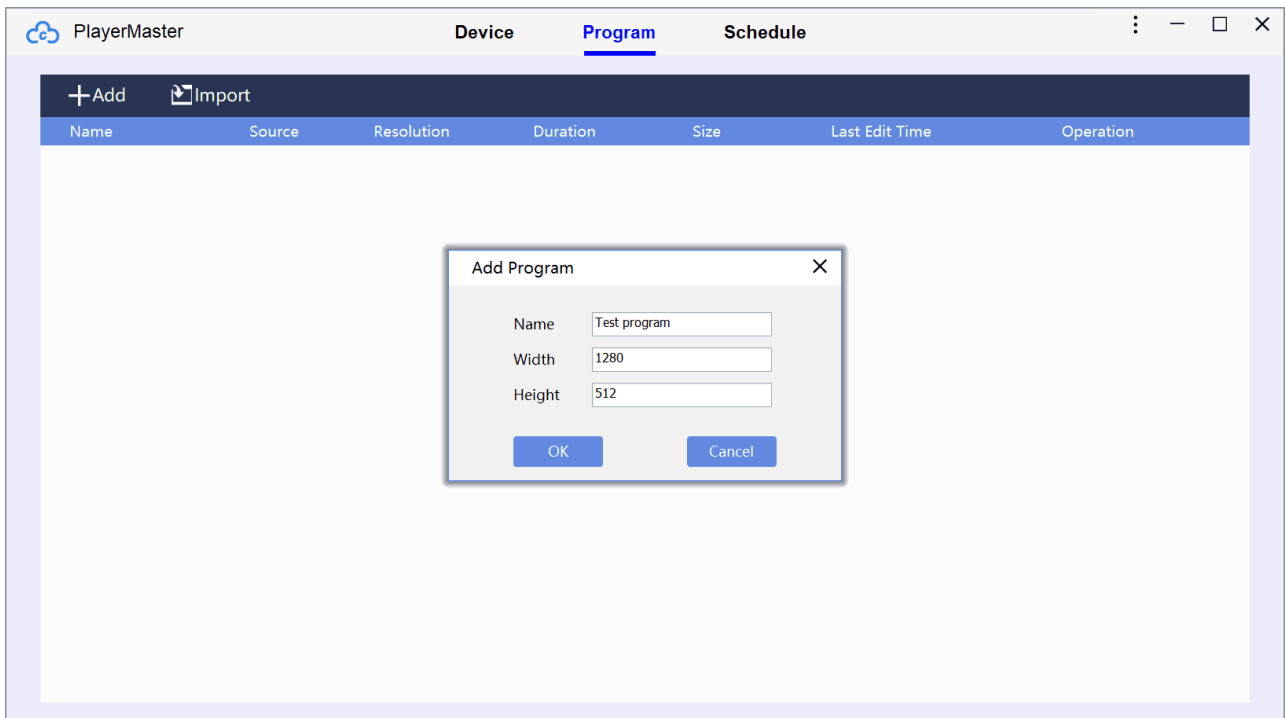


Program	Basic unit, which can be independently assigned to the player for playing.
Program page	When different window layouts are needed in the same program, it can be realized by setting different program pages. Of course, it can also be realized by setting different programs.
Window	Multiple program windows can be added to the program page, the content of different program windows is different, and the program windows under the same program page are played at the same time. Window determines the layout form of the program

Materials	The specific content displayed on the LED screen, including video, picture, GIF, text file, and office file.
-----------	--

Note: In each LED screen, the relation between the program page and the program page, and between the content and the content in the same program window is in-turn playing, while the relation between the program window and the window under the same program page is parallel and concurrent playing.

Click  to add programs in the following format types:

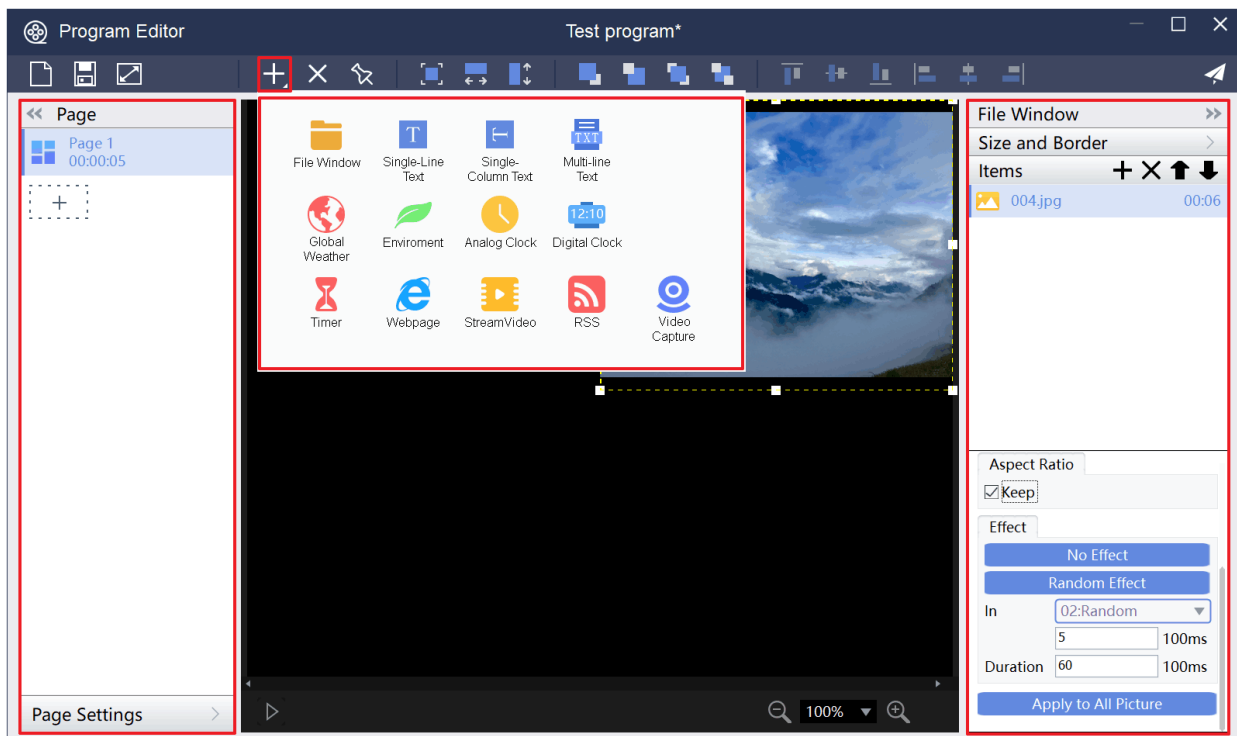


Description of Window Type


No.	Window Type	Description of Content
1	File window	Video, picture, Gif, Txt document, RTF document, Office document (Word, Excel, PPT)
2	Single-line text	Txt document, manual editing and input
3	Single-Column text	Txt document, manual editing and input
4	Multi-line text	Txt document, RTF document, Word document, manual editing and input
5	Global Weather	Weather in global cities
6	Environment	Temperature, humidity, smoke, noise and air quality
7	Analog Clock	Round image clock
8	Digital Clock	Digital timing clock
9	Timer	Count-up timer, count-down timer
10	Webpage	Manually enter the website. E.g. www.colorlightinside.com
11	Stream Video	Program on the streaming medium website
12	RSS	News subscription

Select different program windows and materials according to actual needs.

After editing, click Save  and select Publish .

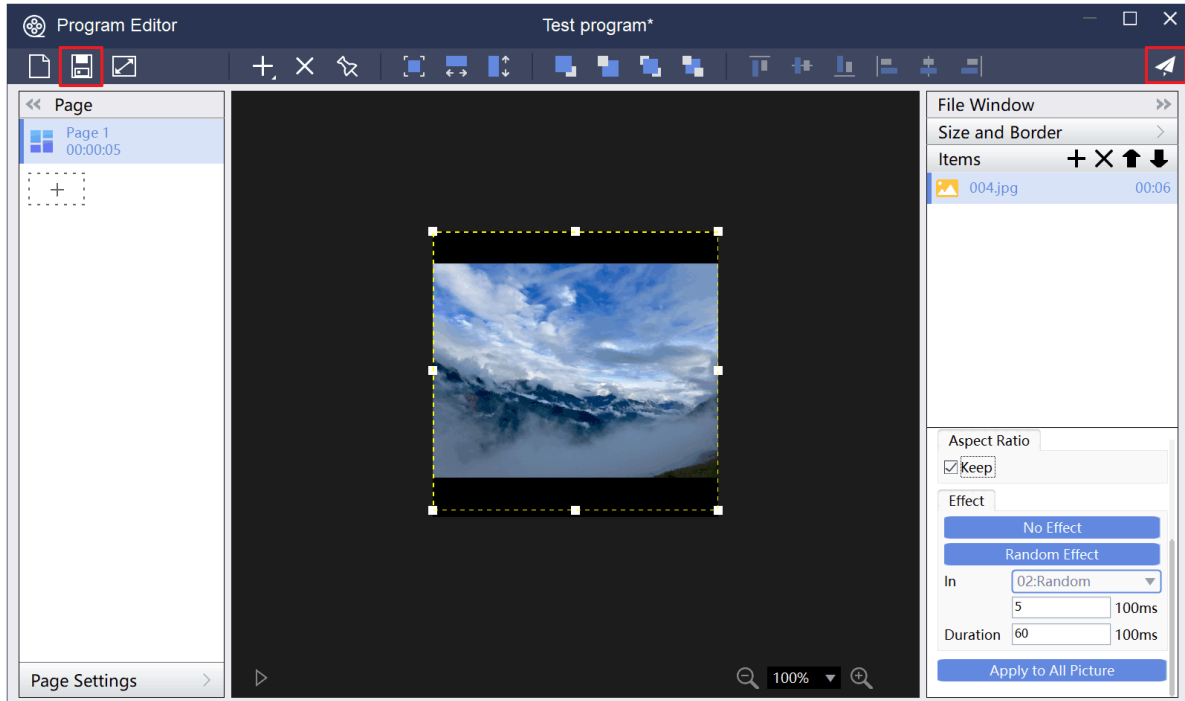


After finishing releasing, the released content just now will be displayed on LED display screen.

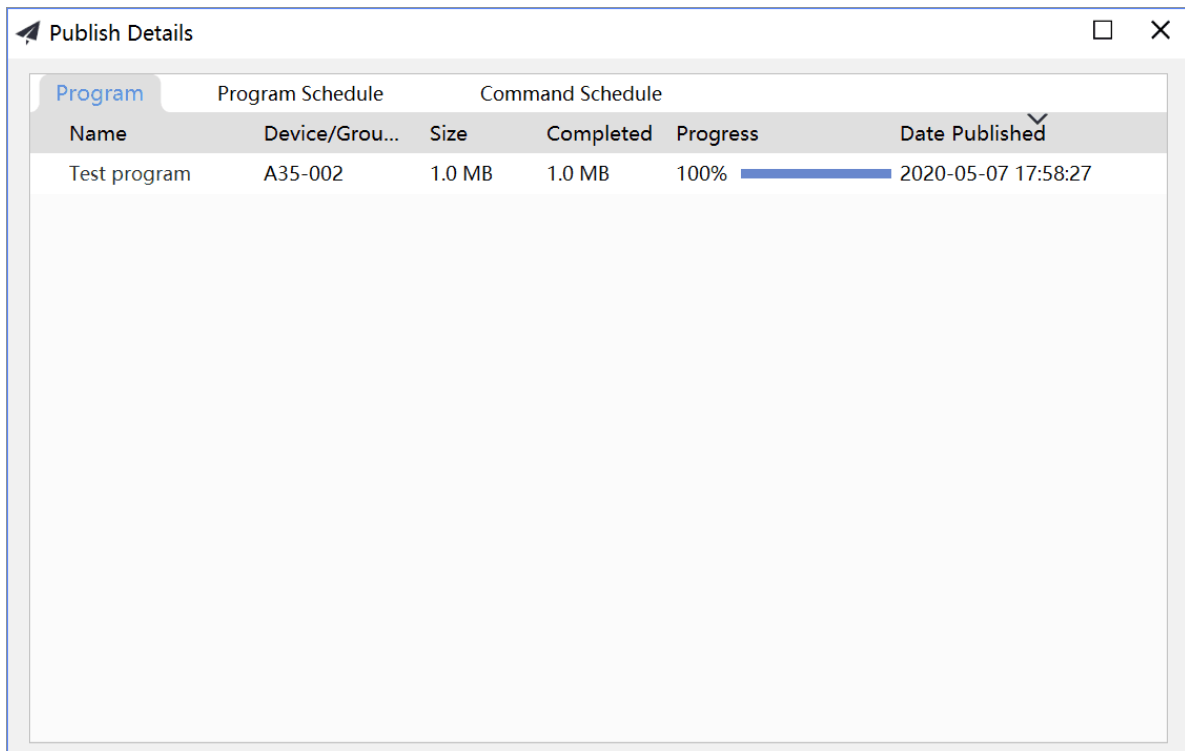

Configure other parameters of the player

Other functions: View schedule, brightness, color temperature, volume, time, power, net, signal switch, monitoring, and device language

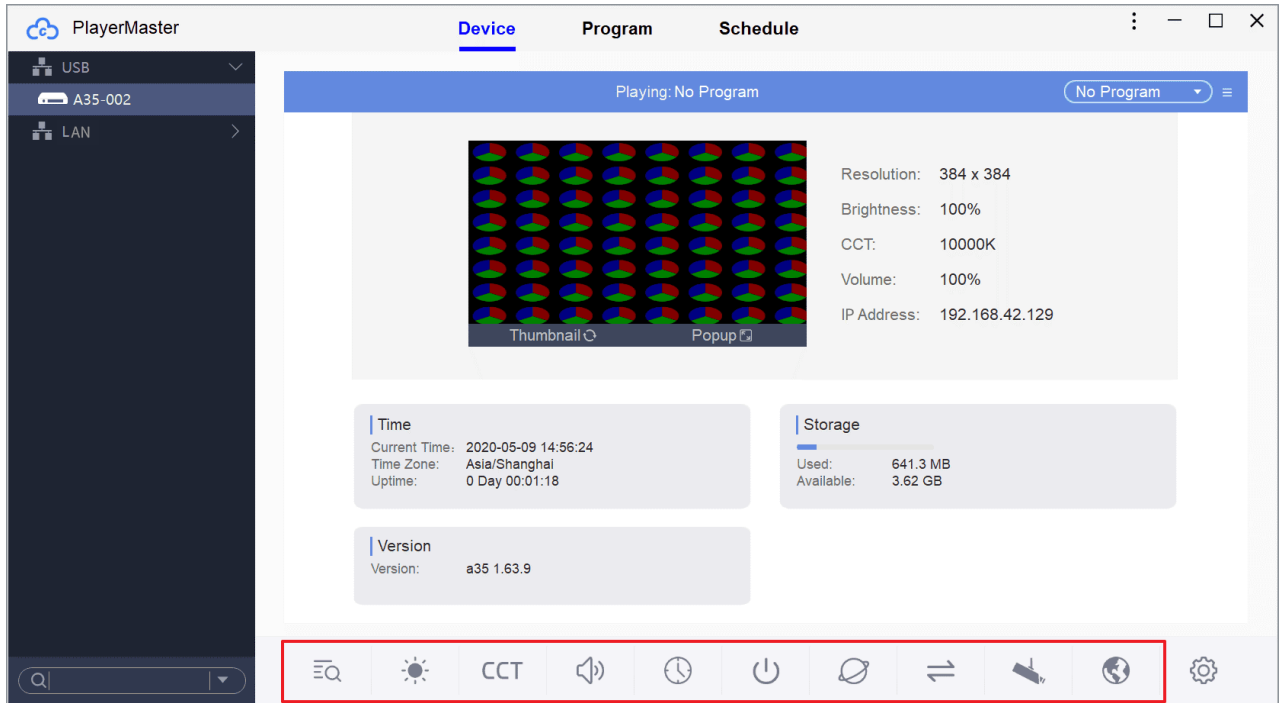

More

Now you have mastered the use of basic functions of A35 player.

If you need to learn more advanced functions, please refer to PlayerMaster User Manual or contact the Company's technicians for more information.



Visual Future

Colorlight Cloud Tech Ltd
www.colorlightinside.com